



Plumbing of Pumptec Spray Basic



Spray Basic has 1 Inlet (suction) ports and 2 outlet (pressure) ports.

Inlet ports: 1/2" Hose Barb
Outlet ports: 3/8" Hose Barb (2)
Regulator ports: 3/8" Hose Barb (Bypass)

- Inlet port connects to water supply from tank. 3/8" cap can be removed to provide another inlet port.
- Outlet ports connect to spray guns, nozzles, or other pressure accessories.
- The regulator 3/8" hose barb should be connected to a hose that routes back to tank. Do not connect bypass hose from regulator back to pump.
- To correctly plumb the pump, it is necessary to use at least 1 Inlet and 1 Outlet port.
- The above plumbing is the preferred set-up to provide the easiest installation.
- Use of included Pressure Regulator is mandatory. Failure to use the Regulator will lead to pump and motor failure.
- The levered ball valve can control flow to a spray boom or other accessories.