

Backpack Security Cabinet Assembly Instructions

Contents:


1 top & 1 bottom aluminum section (these parts are identical)

4 side aluminum sections (these parts are identical)

1 rubber grommet

Nuts & bolts

Remove protective plastic from aluminum parts before beginning.

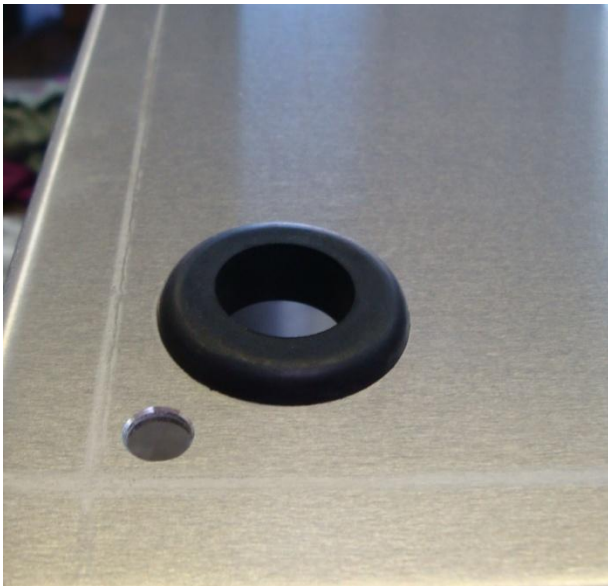

1. Insert grommet in large hole in top section. Folding the Grommet in half will make this easier.




www.gspray.com

Our Equipment. Your Success.

Backpack Security Cabinet Assembly Instructions



2. Bolt one side section to the left side of the bottom section, using two bolts & nuts. The side section should be positioned to the outside of the bottom section. Be sure nuts are on the outside of the case so they don't scratch the backpack. Repeat for right side.

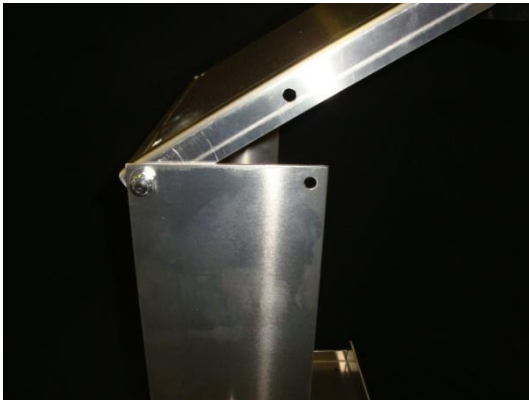

3. . Bolt one side section to the left side of the top section, using one bolt & nut in the rear hole, creating a swivel action. The side section should be positioned to the outside of the bottom section. Be sure nuts are on the outside of the case so they don't scratch the backpack. Repeat for right side.



Our Equipment. Your Success.

Backpack Security Cabinet Assembly Instructions



4. **Complete** the assembly by bolting the top side sections to the bottom sides using two nuts/bolts. Be sure to select the holes to size the rack to fit your backpack. Nuts should be to the outside of the cabinet.



5. Bolt the completed unit to your vehicle using the 4 holes in the bottom section. Use your own lock in the front hole of the top section.

Questions? 602.371.1993



www.gspray.com

Our Equipment. Your Success.